

## INSTRUCTION MANUAL THERMOHYGROMETER MODEL TH-200

Thank you for purchasing the thermohygrometer model TH-200.

- This instrument is designed to measure humidity and temperature by being mounted on a wall. Do not use this instrument for any other purposes.
- Be sure to read this instruction thoroughly before using. Keep this instruction manual in a secure place for future reference.

### Precautions on use


- Install the TH-200 at the level of the user's eyes.
- The TH-200 may indicate R. humidity of 20% or less that is out of the scale range in dry, cold seasons, but this is not malfunction.
- After unpacking, allow about 30 minutes to indicate the correct measuring value of the surrounding environment.
- To clean TH-200, use a dry, soft cloth.

### Cautions

- Do not expose to direct air flow from an air conditioner or a heater.
- Mount on a perpendicular wall free from vibrations.
- TH-200 is a precision instrument. Do not drop or knock about it. Doing so may result in malfunction.
- Do not use TH-200 in an atmosphere out of measuring range.

### Installation

Use the hooking hole shown on the rear of the case to hang TH-200 perpendicularly against the wall.

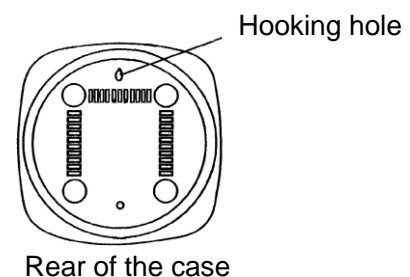

### Specifications

Measuring range	: -30 to 50°C for temperature 20 to 100% for R. Humidity
Accuracy	: ±2°C for temperature ±5% (40 to 70% at 15 to 25°C) for R. Humidity ±8% (other than above) for R. Humidity
Materials	: Case and Cover: ABS resin Window: Glass
Dimensions	: 180(W) mm x 180 (H) mm x 35(D) mm
Weight (approx.)	: about 260 g

**SATO KEIRYOKI MFG. CO., LTD.**

3-4 Kanda-kajicho, Chiyoda-ku, Tokyo 101-0045 Japan  
URL: <http://www.sksato.co.jp/english/>